

## BACK

### OPERATING TIMES AND SPEED SETTINGS

TYPE OF FOOD	TIME (seconds)	SPEED	MAX WEIGHT (g)
Potatoes	5-10	2	50g
Carrot & Swede	5-10	2	50g
Broccoli	5	1	50g
Cauliflower	5	1	50g
Pasta	5-10	1	50g
Meat/Fish	5-15	2	50g

These times are guidelines only, the time needed to blend sufficiently will depend on the type of food you are blending. Adding a little bit of cooled water will aid blending and help give a smoother consistency.

### HOW TO CLEAN THE BABY FOOD BLENDER

Before first use and after every use, wash the bowl, lid and knife blade in warm soapy water and dry thoroughly.

**WARNING! HANDLE THE KNIFE BLADE WITH CARE AS IT IS EXTREMELY SHARP.**

The bowl and lid are dishwasher safe (top shelf only). The knife blade is not dishwasher safe.

Wipe the base with a damp cloth but **DO NOT IMMERSE IN WATER.**

The department of health recommends that solid food should not be introduced before 6 months. Although you can start earlier (but not before 4 months) if advised by your health visitor or GP.

**Information on the disposal for Waste Electrical & Electronic Equipment (WEEE)**

This symbol on the products and accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper disposal for treatment, recovery and recycling, please take these products to designated collection points where they will be accepted on a free of charge basis. In some countries you may be able to return your products to your local retailer upon the purchase of a new product. Disposing of this product correctly will help you save valuable resources and prevent any possible effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest collection point for WEEE. Penalties may be applicable for the incorrect disposal of this product in accordance with national legislation.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

The product is fitted with a BS 1363 mains plug containing a 3A fuse. If it ever becomes necessary to replace the fuse, only use fuses that are marked BS 1362, and rated at 3A. In the unlikely event that this plug is not suitable for the sockets in your home, it should be removed and a suitable plug fitted as follows:

The wires of the mains lead are coloured in accordance with the following code:

GREEN AND YELLOW – EARTH

BLUE – NEUTRAL

BROWN – LIVE

As these colours may not correspond with the coloured markings sometimes used to identify the terminals in the plug, connect as follows. The wire coloured GREEN AND YELLOW must be connected to the terminal marked E or by the earth symbol or coloured GREEN or GREEN AND YELLOW. The wire coloured BLUE must be connected to the terminal marked N or coloured BLACK. The wire coloured BROWN must be connected to the terminal marked L or coloured RED. If you are in any doubt about how to wire a plug or replace a fuse safely, consult a qualified electrician.

Mayborn Group

Northumberland Business Park West

 
Cramlington Northumberland NE23 7RH, UK

Mayborn Group is a trading style of Jackel International Limited.

Copyright © Jackel International Limited 2017

Made in China.

tommeetippee.com

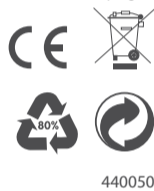

440050

## COVER



### baby food blender

#### INSTRUCTIONS FOR USE

(please read and keep for future reference)

### IMPORTANT WARNINGS!

These instructions can also be found at [www.tommeetippee.com](http://www.tommeetippee.com). Keep this instruction sheet for future reference as it includes important information.

This appliance is intended for household use only. Do not use outdoors. Before plugging in the Blender for the first time ensure that the voltage is compatible with your electricity supply by checking the label on the base of the unit. Do not immerse in water. To protect against fire, electric shock and injury to persons. Do not immerse cord, plugs or other parts of the unit in water or other liquid. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children. Do not let the cord hang over edge of kitchen work surface or touch hot surfaces. The product has been fitted with a cord wind on the base of the unit to allow you to adjust the length of the cord safely. It is recommended that the cord be kept as short as possible. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. User maintenance other than cleaning is not required for this product. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. If the supply cord is damaged it must be changed by a qualified person in order to avoid a hazard. If within a retail warranty period this product should be exchanged at place of purchase. The manufacturer will then be made aware.

 
## INSIDE 1

For questions or support visit our website [www.tommeetippee.com](http://www.tommeetippee.com)

Always use on a flat heat resistant surface. Do not move appliance when in use. Do not use any accessories other than those supplied with this appliance. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use. Allow to cool before putting on or taking off parts and before cleaning the appliance. Before first use, before each use and after every use wash the bowl and lid in warm soapy water or use a dishwasher (top shelf only) and dry thoroughly. Wash the knife blade in warm soapy water and dry thoroughly. The knife blade is not dishwasher safe. Handle the knife blade carefully as it is extremely sharp. Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning. Never leave the appliance running whilst empty. Do not attempt to repair the appliance yourself. Do not put any utensils into the blender when the blender is turned on. Make sure that the blade has stopped turning completely before removing the cover. Do not fill the unit past the 250ml line. No part of this product is suitable for microwave use. No part of this product is suitable for sterilisation. Be careful if hot liquid is poured into the blender as it can be ejected out of the appliance due to a sudden steaming.


## INSIDE 2

### FOOD BLENDER

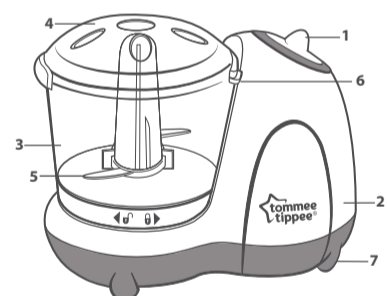

1. Speed control dial
2. Motor base
3. Bowl
4. Lid
5. Blender blade
6. Lid safety lock
7. Non slip rubber feet

### OPERATING THE CONTROL DIAL

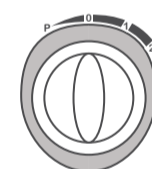 

- P= Pulse
- 0= Off
- 1= Low speed
- 2= High speed

This unit has a variable speed control dial which can be set to either low speed when less power is needed or high speed /pulse when full power is needed. The speed dial can be adjusted whilst the unit is in use.

**WARNING! BE CAREFUL NOT TO TOUCH THE BLADE AS IT IS EXTREMELY SHARP.**

### HOW TO USE THE BABY FOOD BLENDER

#### HOW TO ASSEMBLE

1. Place the bowl on to the base, line up the bowl tab to the locking bowl slot.
2. Turn the bowl counter clockwise until it locks into place.
3. Slide the knife blade down over the shaft and turn until it drops into place. **WARNING!** Handle the knife blade carefully as it is extremely sharp.
4. Place the lid onto the bowl, with the extended tab on the same side as the base slot and turn the cover counter clockwise into the base slot as far as it will go. **WARNING!** For your safety this unit has both a lid and bowl safety interlock system. The unit will not operate unless the extended tab on the lid is correctly located inside the base slot and the bowl is locked into place on the base. Do not attempt to operate the unit without the lid being in place correctly.

#### HOW TO USE

1. To use, remove the lid and place food in the bowl, do not fill the unit past the 250ml line. This appliance is intended for processing small quantities of food.
2. Place the lid on the bowl and turn to lock into place.
3. Select the desired speed using the speed control dial for a few seconds until desired consistency is reached. For coarsely chopped foods, use a repeated short pulsing action until the desired consistency is reached. For large amounts of food, longer processing may be necessary. **WARNING!** This blender is designed for a maximum running cycle of 1 minute. Do not operate continuously for more than 1 minute. After operating the appliance continuously for 1 minute, let the unit cool down for at least 2 minutes before operating it again. After operating 4 cycles, let it cool down to room temperature before operating it again. Keep hands and utensils away from the cutting blade while chopping food.
4. If the unit does not operate, check that the bowl locking tabs are properly positioned, and that the lid is aligned properly. These parts are designed to lock into place.
5. Make sure that the blade has stopped turning completely before removing the lid. Unplug the unit, remove the lid and remove the plastic blade hub. Carefully pull the knife blade straight up. Remove the bowl and empty the processed food. Do not use the food blender bowl for storing food.